

Note, serial # prefix 208 and lower indicated a power failure by going blank.


HOW TO TURN ON AND SET THE CLOCK TO THE CORRECT TIME
(Incorrect time may be set with the same procedure)

Setting the clock is a lot of fun. In fact, it is so much fun you may want to demonstrate the clock by setting it for friends.

We would like to introduce you to the Chrono-Wand (a magnet). Remove it from the envelope on the back of the clock. With it in your possession, the clock is now in your control. Plug in the clock. You will see some lamps come on. The pattern will not change even if you wait. This is how the clock indicates a power failure, by stopping. Now hold the Chrono-Wand in the position shown in the figure below. Move it around this area until you notice the lamps begin to flash rapidly. Congratulations, you have found the fast set switch.



Now move the Chrono-Wand to the same spot on the bottom of the right side of the clock. If you hold the magnet in this position the pattern will advance one every second.

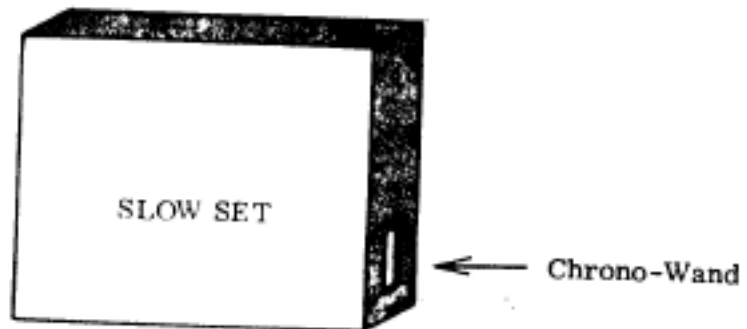

To set the clock, advance the time using the "fast set switch" through a full twelve hours, then continue until you're within an hour of the correct time. Then move the Chrono-Wand to the "slow set switch" advancing the time to the correct minute. If you advance the time too far repeat the process. (See footnote 14 for accurate setting)

Store the Chrono-wand in a safe convenient place. If you should lose the Chrono-Wand, order another clock or see footnote (10).

REMEMBER HE WHO CONTROLS THE CHRONO-WAND CONTROLS THE CHRONO-CLOCK