


AUDOCRON INSTRUCTIONS

 
 
 
AUDOCRON is a quality precision time piece. Reading these instructions will increase your fun and enjoyment.

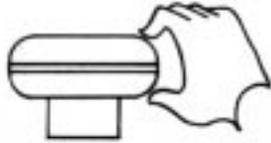

HOW TO TELL THE TIME

Touch the top and bottom halves of the clock. The AUDOCRON will chime out the hours and the minutes in the following way. You will hear the time as groups of chimes.

Examples:



Note that the ten minute chimes are always higher pitched. You will find it very easy to hear the time after just a few touches. In addition, AUDOCRON is programmed to chime on the hour & half hour automatically.

HOW TO SET THE CORRECT TIME

(The incorrect time may be set with the same procedure)

TO CHANGE THE HOUR, hold down the hour switch (little button next to the battery). Each flash of the lamp indicates a one hour advance. If it is 5:28 and you want to set it to 4:28, then count 11 lamps flashes.

TO CHANGE THE MINUTE, hold down the minute switch. Each flash of the lamp indicates a one minute advance. (To make counting easier, the chime speaker will make a little "chirp" sound when you hit each 10's of minutes). Each minute advance also sets the seconds to zero.

Example:



AUDOCRON chimes 2:05
Correct time is 8:21:06

Hold down the Hour Switch and count off 6 flashes, advancing the hour

to 8. Hold down the Minute Switch and count off 16 flashes, advancing the minutes to 21. Finally, to get the hourly-chime to chime exactly on the hour, wait until 8:21:59 and push down Minute Switch for one more flash. You have set it to 8:22:00.

THE HALF-HOUR CHIME

The AUDOCRON has a half-hour chime ("ding - dong") that comes "enabled" (turned ON). If you prefer, it may be turned OFF. It's a little tricky, but here is how. With the lid off, do both of these things at the same time - pat your head and rub your tummy, or slightly more effective, touch the center post (the hex spacer that the lid screws into) and the bottom half of the clock with one hand while pushing down on the Hour Switch at the

same time with the other hand. If you don't understand what you just read, you're normal! Having mastered the "hand positions", you will hear the clock repeatedly chime "ding - dong - ding - dong. If you let go right after a low note, you have turned the half hour chime OFF. If you let go after a high note, you have turned it ON. **HINT:** Putting a little saliva on you finger helps you make good contact with the center post.

QUARTZ CRYSTAL ACCURACY

The AUDOCRON is set at the factory to an initial accuracy within 30 seconds per year. However, the effects of temperature, aging will change this.

BATTERY INFORMATION

AUDOCRON requires a 9-Volt **Alkaline** Battery which should last about 12 months. To access the battery, unscrew the top dome by turning it counter clockwise.

CLEANING

Your AUDOCRON finish is either 24 karat gold or silver plate. Silver cleaner works well for both. **NEVER USE CHROME POLISH OR RUBBING COMPOUNDS.** Apply or remove the cleaner with a Kleenex Don't use elbow grease! A delicate touch is all that is necessary. Let the cleaner do the work. If your AUDOCRON case should become damaged a new one may be purchased from the factory. Call for details. If you have a silver case and want a gold or vise-versa that can be accomplished too.

PROBLEMS-SOLUTIONS

Lamp does not light, or clock chimes continuously or chime volume is low, change the battery.

The AUDOCRON's touch activation sensitivity will vary with the dampness of your hands. Dry hands do not work well. When this happens try "huffing" your breath onto your finger tips.

If the chime is too soft, try loosening the lid. This will be adequate for most needs.

The clocks microprocessor can get disorganized, with random types of malfunctions. If you still have trouble try this, get a metal key or paper clip and momentarily short-out (electrically connect) pin #4 to pin #5 on the integrated circuit marked "PIC". The pins are numbered counter-clockwise, starting with #1 in the lower left corner. Still trouble, write, call us.

WARRANTY AND REPAIR

Your Chrono-Art AUDOCRON clock is guaranteed against defects, under normal use, for one year from the date of purchase. The warranty covers parts (excluding battery) and labor only. **ALL REPAIRS ARE HANDLED DIRECTLY BY THE FACTORY.** If you have any difficulty please call or write. Include a description of the problem and the serial number located on the bottom of the clock. You will receive an immediate reply including shipping instructions.

CHRONO-ART, 9175 Poplar Ave, Cotati, CA 94931

707-795-1895